


## Connection of GL-TV 34 fuel level sensors to the GPS terminal (tracker) on the RS-232 interface

The GPS terminal (tracker) must support the Omnicomm or Modbus protocol. The GL-TV 34 sensors support the Omnicomm prototype by default.

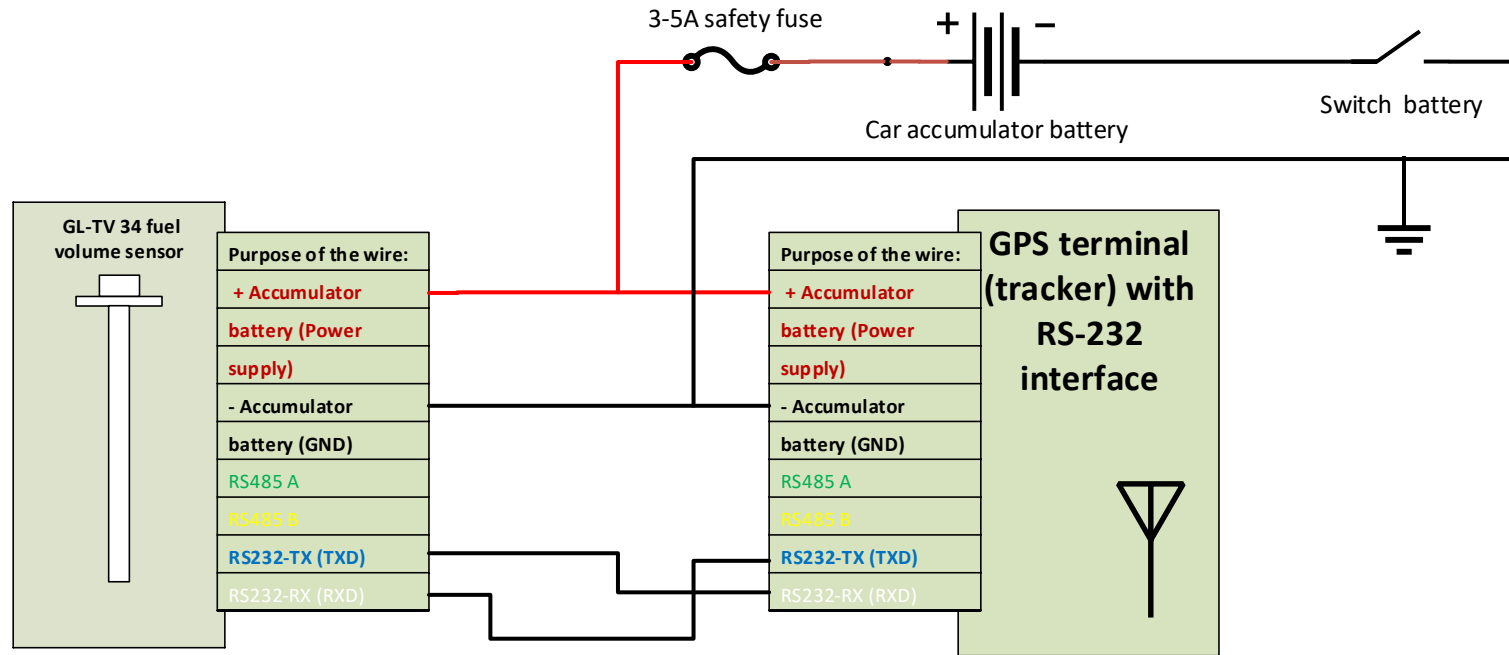

Connect RXD, TXD and GND sensor contacts to Terminal TXD, RTD and GND contacts.

Set for the RS232 Terminal channel an option to receive relative fuel level or frequency from the sensor.