


Connection of GL-TV 34 (or GL-TV AFD) fuel volume sensor and GL-TV tab fuel volume indicator to GPS terminal (tracker) with RS-485 interface

Instead of the GL-TV 34 fuel level sensor (or GL-TV AFD) any other digital fuel level sensor with RS-485 interface can be used

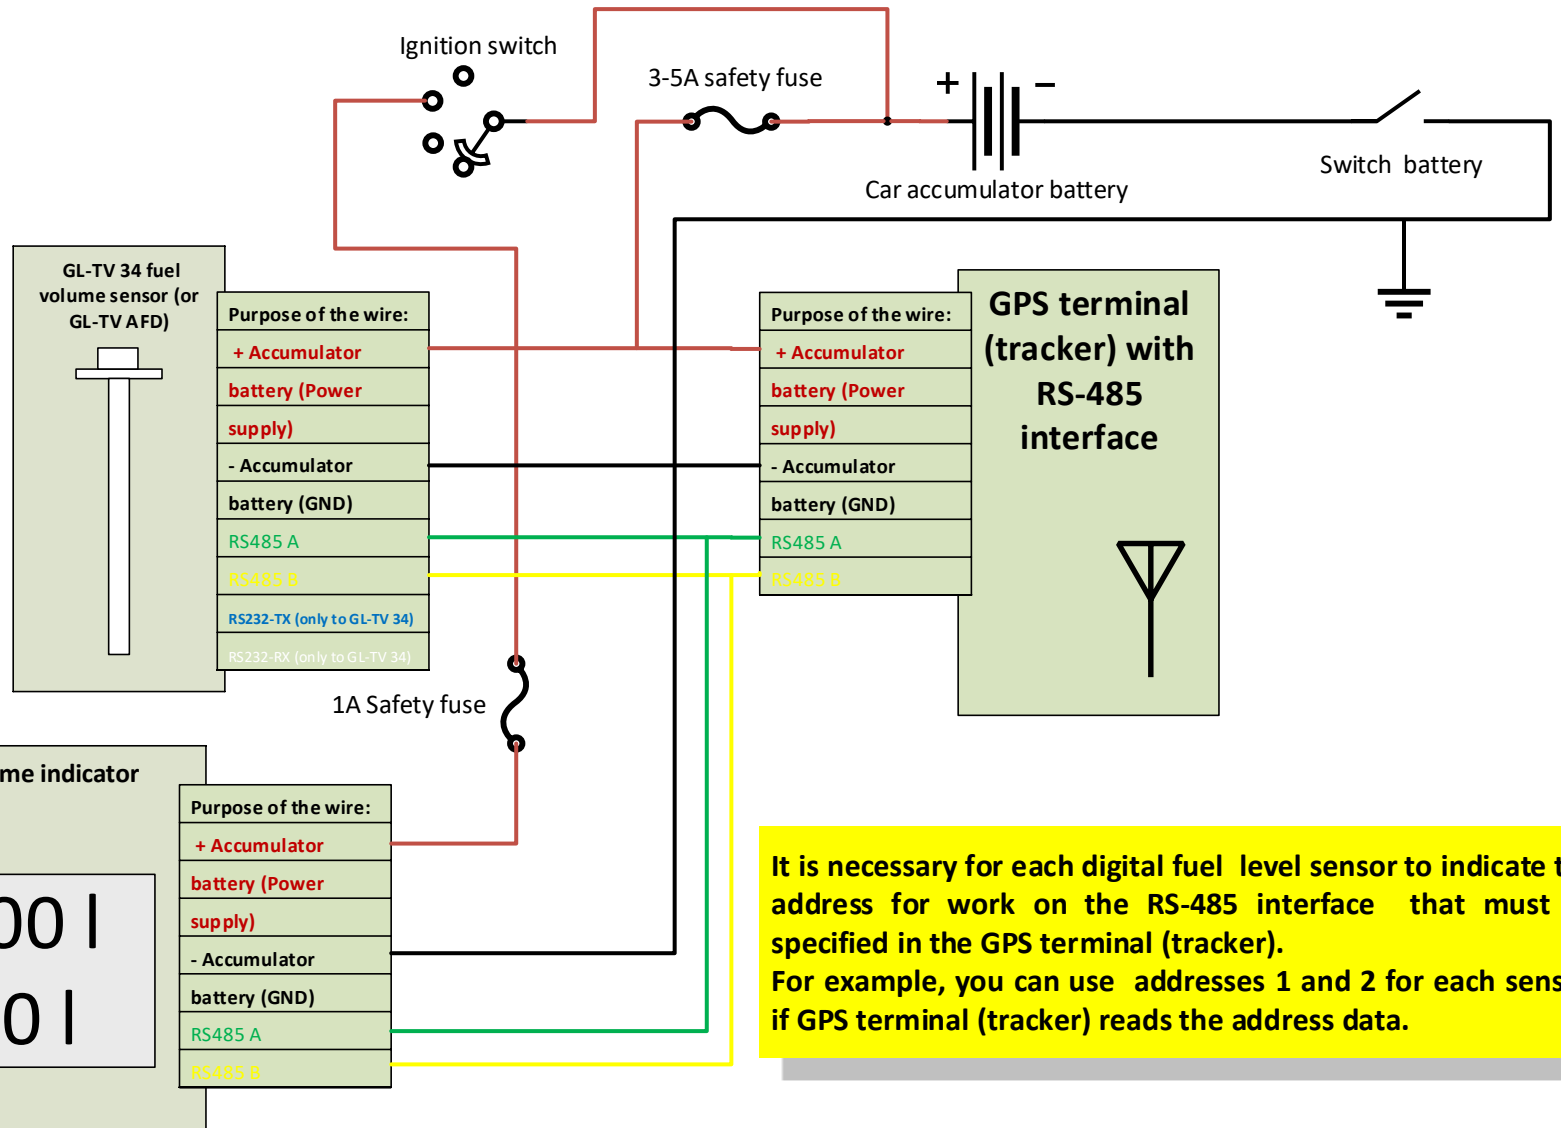

It is necessary for each digital fuel level sensor to indicate the address for work on the RS-485 interface that must be specified in the GPS terminal (tracker). For example, you can use addresses 1 and 2 for each sensor, if GPS terminal (tracker) reads the address data.